

Technical information sheet

Solventum™ Medical Diagnostic Microfluidic Aluminum Foil Tape 9980


Product description

Medical Diagnostic Microfluidic Aluminum Foil Tape 9980 consists of a 4 mil aluminum foil coated on one side with a pressure sensitive silicone adhesive. The tape is supplied on a clear fluoro-silicone coated polyester release liner. The product is designed for use in diagnostic medical devices such as test strips and lab-on-a-chip or other challenging applications such as PCR.

Features and benefits

- Silicone adhesive
- Adheres to a wide variety of substrates
- Thermally conductive
- Low autofluorescence
- Low evaporation
- Designed for lab-on-a-chip and PCR
- Non-hemolytic
- Low extractables
- Non-toxic to mammalian cells

Composition

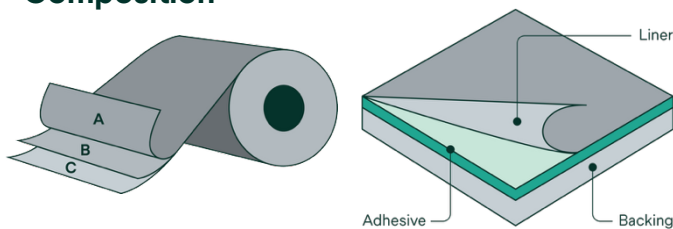

A: Backing	4 mil (102 um) aluminum foil
B: Adhesive	2 mil (51 um) silicone adhesive
C: Liner	2 mil (51 um) clear fluoro-silicone coated polyester release liner

Roll description

Roll length	Maximum 300 yd (274 m) ± 2%
Roll width	Maximum 11.0 in (27.9 cm) ± 0.06 in (1.52 mm)

Note: Core material 6 in (152 mm) plastic core.

Adhesion & liner release

Adhesion to glass, 180° Peel	82 oz/in (9.0 N/cm) - minimum
Liner release, 90° Peel	60 gm/in (232 mN/cm) - maximum

Note: release specification at the time of production

Biocompatibility testing

The adhesive used in product 9980 (with a thinner aluminum backing) has been subjected to the following safety evaluations through an outside laboratory.

Study type	Test method	Standard	Result
Cytotoxicity	Agar overlay	ISO 10993-5	Not cytotoxic
Cytotoxicity	MEM Elution	ISO 10993-5	Not cytotoxic
Hemocompatibility	Direct contact	ISO 10993-4	Non-hemolytic
Hemocompatibility	Extracts	ISO 10993-4	Non-hemolytic


Integrated emission intensity

Samples were compared to known reference materials, quartz slide, borosilicate slide and 10 ppb quinine. Quinine sulfate was chosen due to its high purity and stability as a fluorescence standard reference material.

Sample	Integrated Emission Intensity/ 10^6
Quartz Slide	8.0
Borosilicate cover slide	4.1
Solventum 9980 Adhesive	11.0
10 ppb quinine in 0.5 N sulfuric acid	59.6

*Sum of emission intensities over the range ($\lambda_{EX} = 365 \text{ nm}$, $\lambda_{EM} = 450\text{-}650 \text{ nm}$)

Average fluorescence spectra

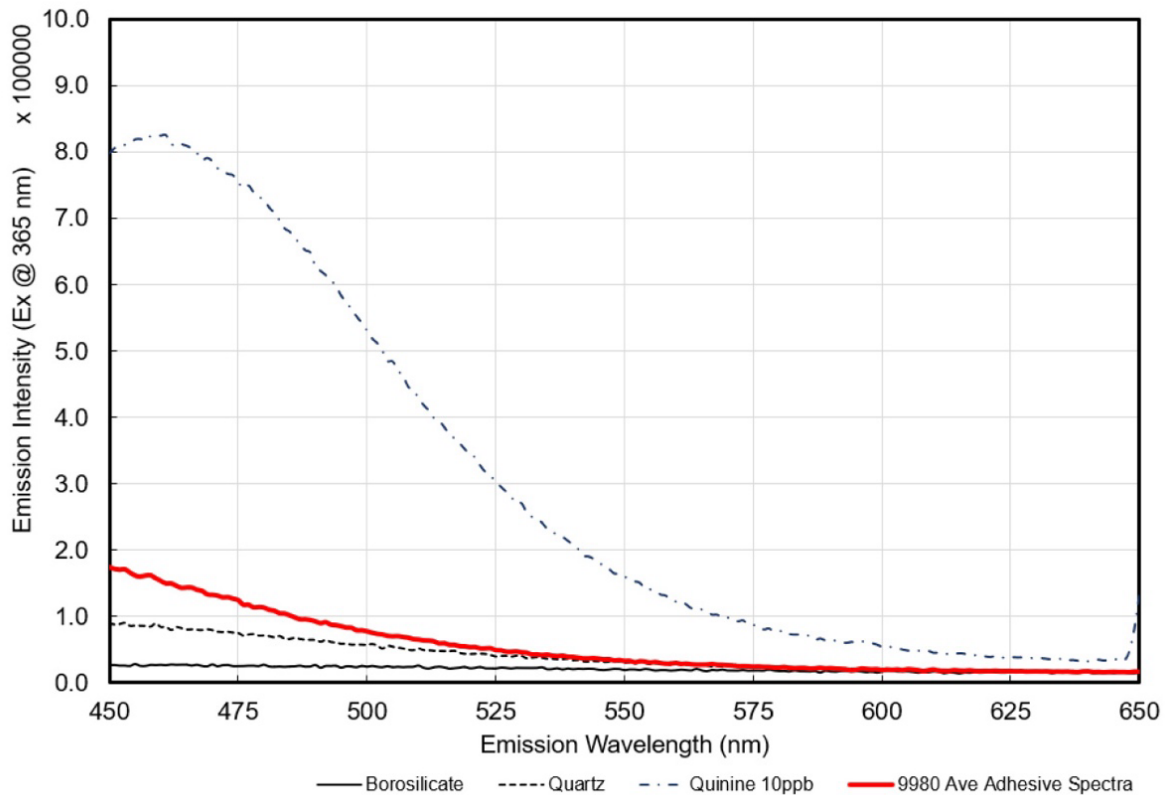

Recommended storage conditions & shelf life

Product as supplied in original packaging will maintain certified properties for a period of two years from date of manufacture when stored at room temperature 68-77°F (20-25°C).

Product and safety information: User is solely responsible for determining the suitability of Solventum samples and products for the intended use including any necessary safety or toxicity assessment. Solventum will provide Material Safety Data Sheets or equivalent and summary results of biocompatibility testing upon request. In every case before using any product in full scale production users should conduct their own tests to determine to their own satisfaction whether the product is of acceptable quality and is suitable for their particular purposes under their own operating conditions.

Notice: Nothing contained herein shall be construed to imply the nonexistence of any relevant patents or to constitute a permission, inducement or recommendations to practice any invention covered by any patent, without authority from the owners of this patent.

Warranty information

All statements, technical information and recommendations herein are based on tests Solventum believes to be reliable, but the accuracy or completeness thereof is not guaranteed. Solventum warrants only that products will meet Solventum's specifications at the time of shipment to the customer. Solventum does not offer any other warranty and does not warrant the performance, safety or such other characteristics of products in combination with other materials. Solventum specifically **does not** warrant products for any intended or unintended uses (whether or not foreseeable); for compatibility or suitability with other components or compatibility with any methods of manufacture or conversion. The foregoing warranty is made in lieu of all other warranties, expressed or implied, including the implied warranties of merchantability, fitness for a particular purpose and freedom from non-infringement.

Limitation of remedies: If products are proven not to meet Solventum's specifications, the sole and exclusive remedy available and Solventum's only obligation shall be, at Solventum's option, to replace such quantity of products which are proven out of specification or to refund the purchase price paid for products.

Limitations of liabilities: The remedies provided herein are exclusive remedies against Solventum for any alleged or actual nonconformance to specifications or defect or other failure in products or for Solventum's performance of its supply obligations. Under no circumstances is Solventum liable for any direct, indirect, incidental, special or consequential damages (including lost profits) in any way related to the product under any theory of law including, but not limited to, negligence and strict liability.

Ordering information

Call us at Customer Service to place an order: 800-742-1994 (U.S.).

Visit our website: go.Solventum.com/MedTechOEM for product and services information, news about conferences we will be attending, new product highlights or to make a direct inquiry.

To have a sales representative contact you, to request samples or clinical and safety summaries, please contact us at Solventum Helpline 800-742-1994 (U.S.) or for international inquiries, please contact your local country representative.



Solventum MedTech OEM

Phone 1-800-742-1994

Web go.Solventum.com/MedTechOEM

©Solventum 2026. Solventum, the S logo and other trademarks are trademarks of Solventum or its affiliates.

2357605